


# J&J Service Instructions

January 5, 2005

## FloJet Check Valve Clean/Replacement

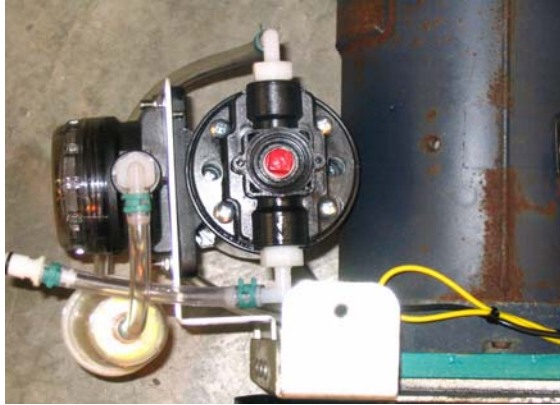

- Remove the four Phillips screws from the pump head.
- With a screw driver carefully pry the check valve out.
- Inspect valve for cracks or nicks around the edges of the diaphragms.
- If any are found valve assembly needs to be replaced.
- If valve appears to be in acceptable condition then with a compressed air blow from the backside to clear diaphragms of debris.
- By hand place valve back into pump head assembly.
- Finish by placing pump on motor with the four Phillips headed screws.

Part	Description
2-60-0049	Squirter, Check Valve Duplex II