


# J&J Service Instructions

March 30, 2004

## Electric Bumper Boat Capacitor and Current Limiter Removal

This service instruction only applies to boats that are wired in the 18v configuration.

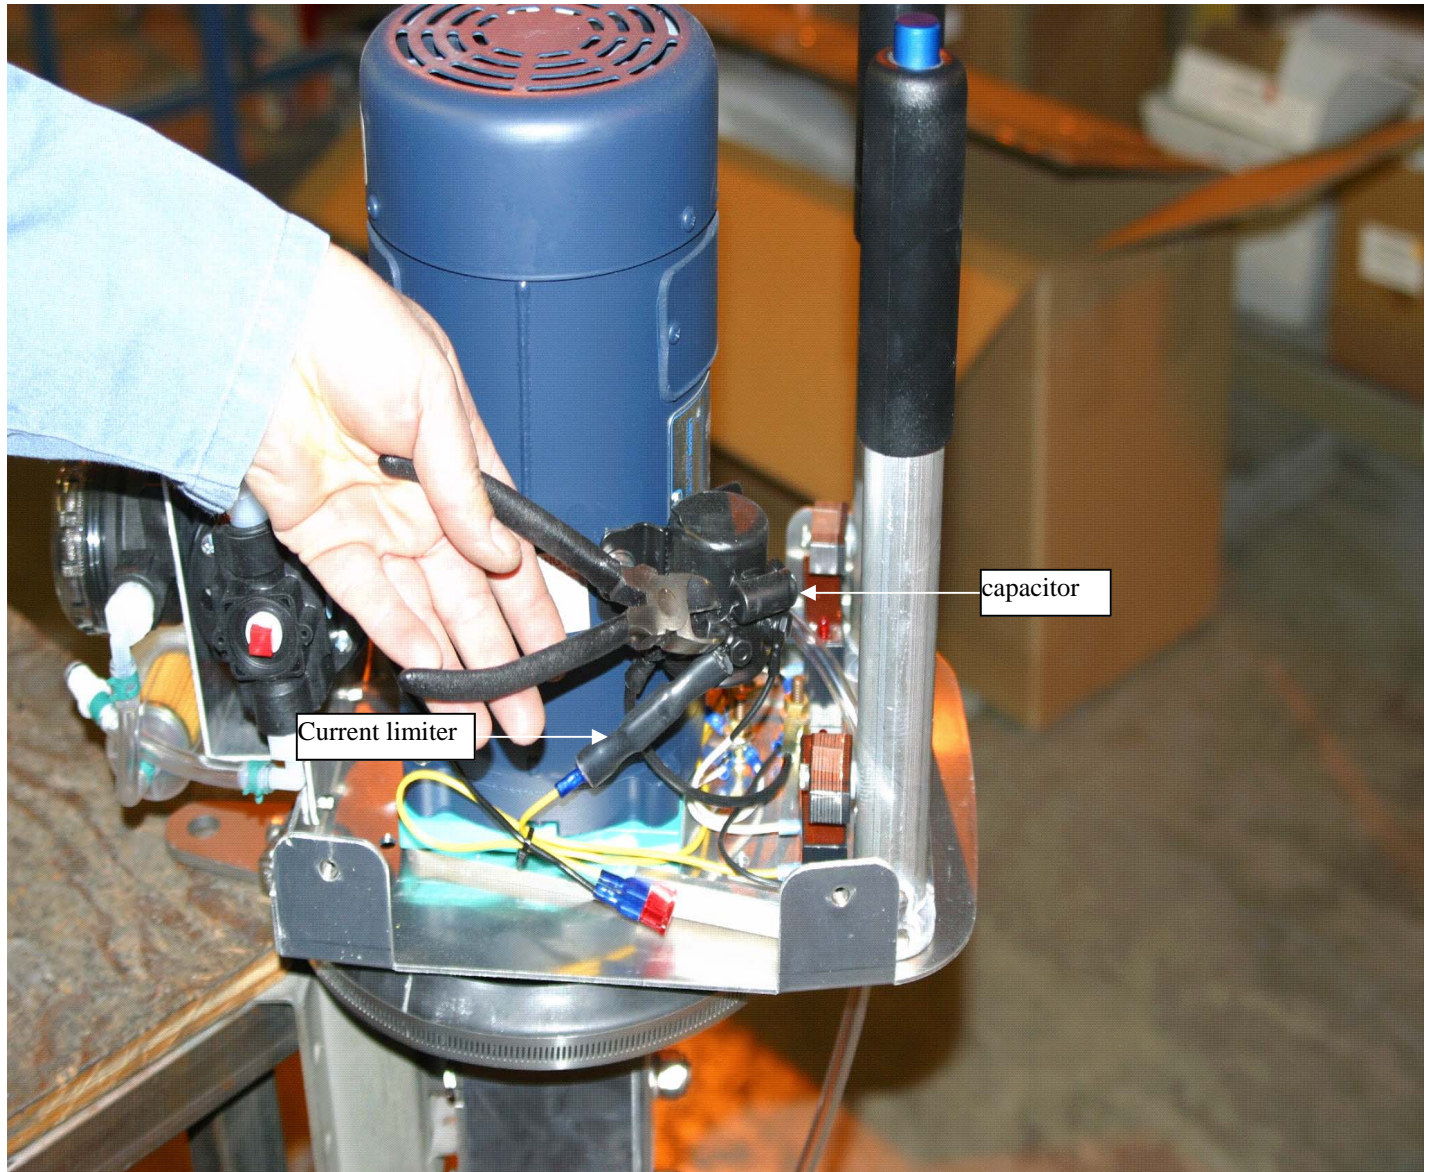

1. Cut leads from capacitor. 2. Unplug and remove current limiter and plug load wire (yellow) directly to relay.

Web Site: <http://www.jjamusements.com>

**If you have any questions please give us a call at (800) 854-3140 or (503) 304-8899.**