


J&J Service Instructions

May 24, 2004

Xpress Flow Install

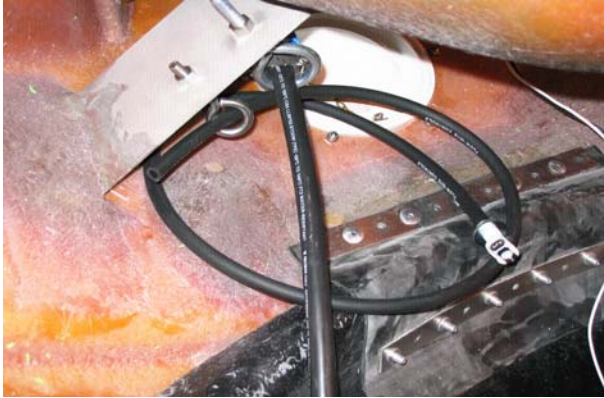

Installation of this system is quite simple. Your kit will be partially assembled having the battery fill banks and filler lead separated. Prop the hood with the provided stick in the hull. Install the eye bolt. Now install that the filler lead through the top side of the eye bolt as to make it easily accessible via vent.



While the hood is open install the filler bank assemblies. Next connect the filler lead to the bank that has the open inlet. Before closing the hood check the routing of the filler lead so that it is not to interfere with the charger lead as it will be pulled in and for charging.



When maintaining your batteries use distilled water. A simple way to do this is to purchase a gallon of water and in the lid poke a hole just large enough to insert the pick up line. When filling it should only take a few pumps to bring fluid levels up to correct heights. Stop pumping when the squeeze bulb noticeably increases in firmness.

Web Site: <http://www.jjamusements.com>

If you have any questions please give us a call at (800) 854-3140 or (503) 304-8899.